




GATE DIMENSIONS

STAND-ALONE GATE DIMENSIONS


Stand-Alone 4 Foot Gate Dimensions with EZ Latch

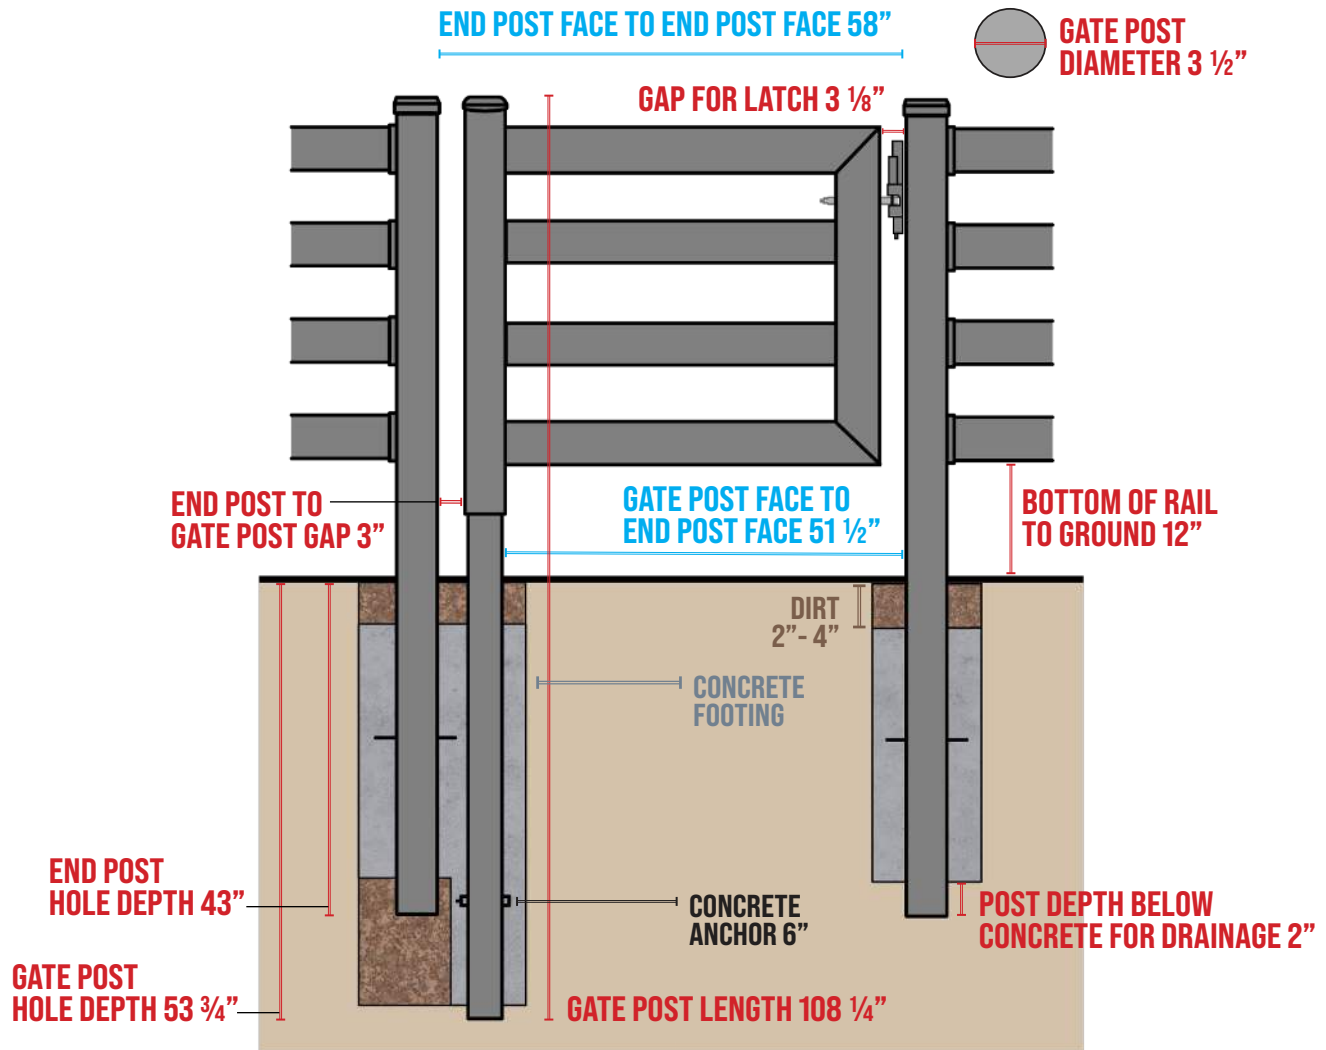


The installation dimensions for all stand alone Buckley Fence Gates are the same for all three sizes of gate, EXCEPT for the End Post Face to End Post Face measurement and the Gate Post Face to End Post Face measurement. These differentiating measurements are marked in the following figures in blue.

- End Post Face to End Post Face dimensions are exact and must be within the nearest 1/8".
- End Post Face to Gate Post Face is exactly 3". Reference page 16 for setting the spacing between End Post Face to Gate Post Face.

Stand-Alone Section Gate (~8.4ft) Dimensions with EZ Latch

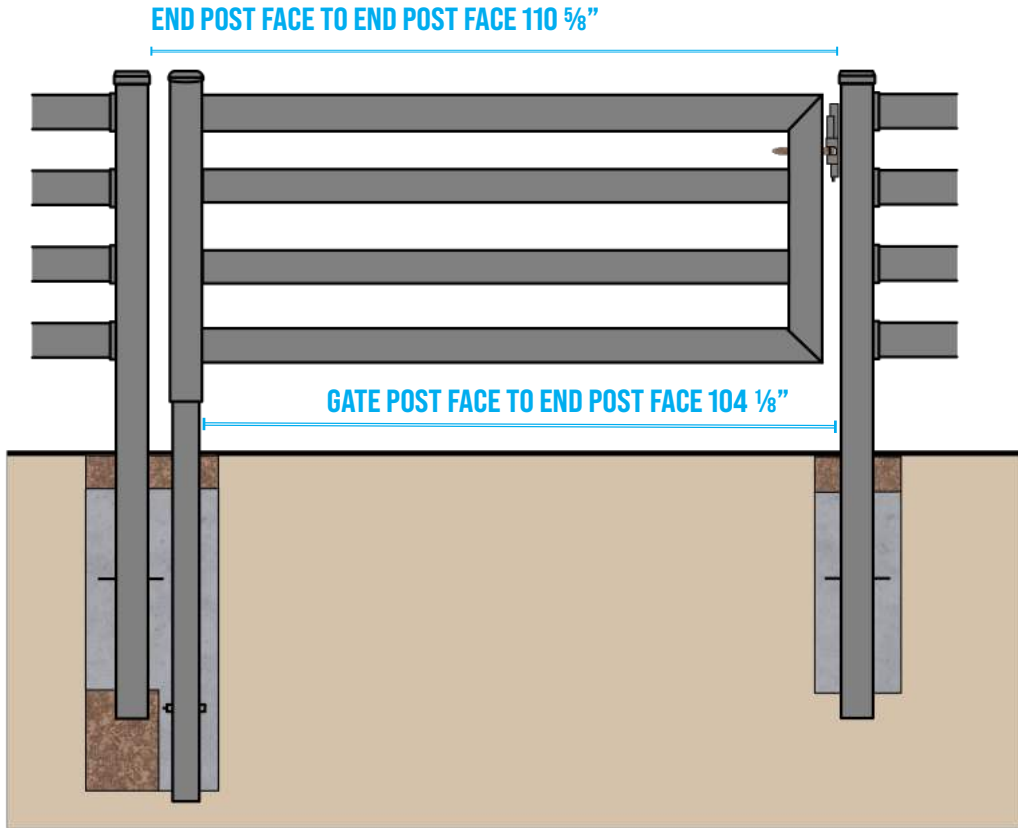

Stand-Alone 12 Foot Gate Dimensions with EZ Latch

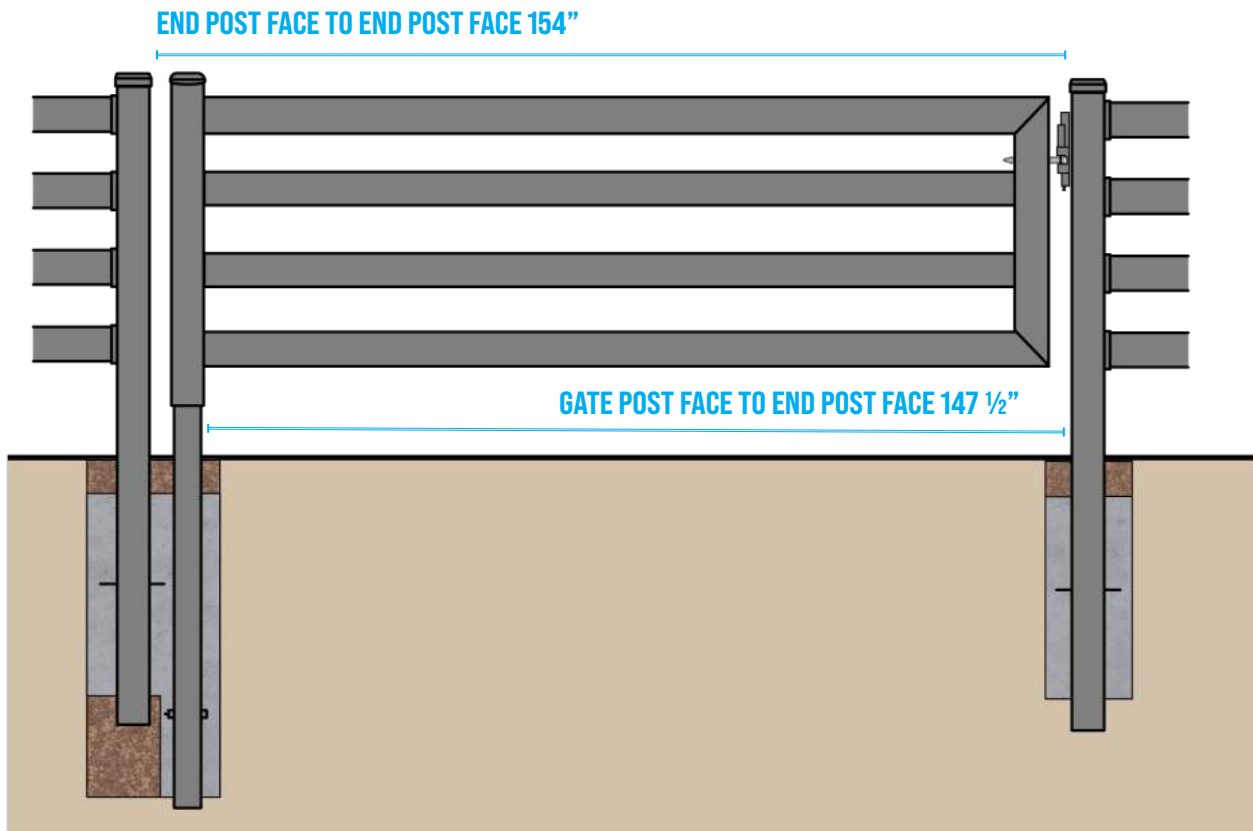


DUAL GATE DIMENSIONS

Dimension for any combination of Buckley Fence gates if used as doubles. Refer to the Stand-Alone Gate Dimensions on page 10 for individual gate dimensions.


For Dual Gates, you will measure from End Post to End Post and from Gate Post to Gate Post.

Dual 4 Foot Gates Dimensions

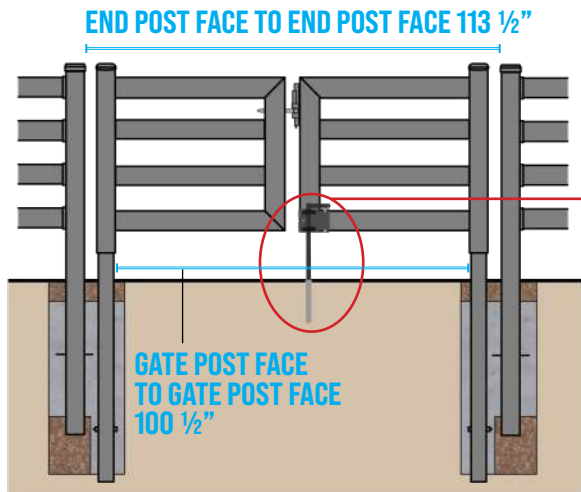


Buckley Drop Anchors clamp on the lower corner of your gate. The Drop Rods drop into 12" Ground Tubes. Installation instructions for the Drop Anchor and ground tubes can be found on [page 23](#).

Dual Section Gates Dimensions

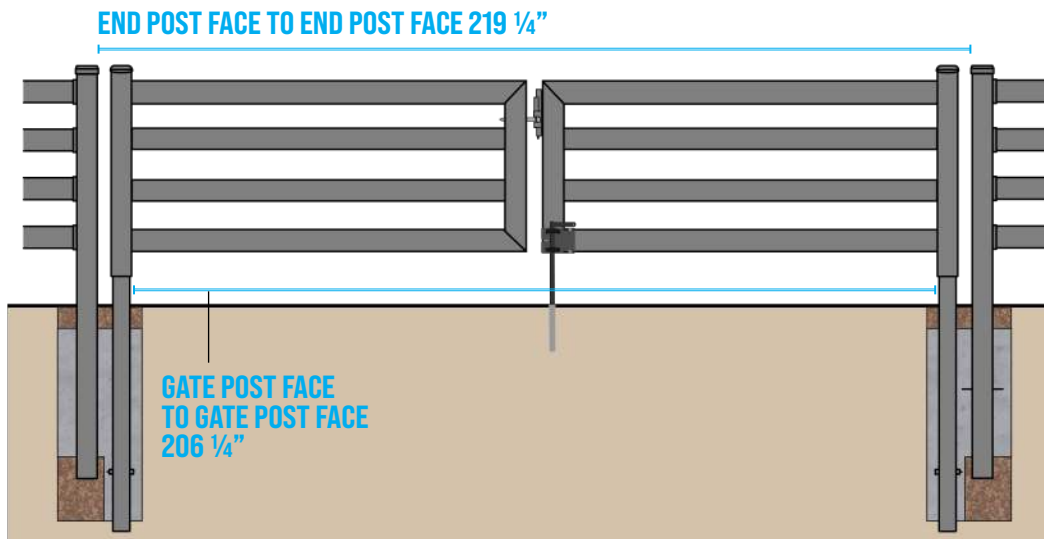


- The nominal opening between gate faces for Dual Gates is 4 1/4" when an EZ Latch is used. When not using an EZ Latch, the gap between gate faces is 3 1/4". In this case, 1" should be removed from the End Post Face to End Post Face Spacing.


Dual 12 Foot Gates Dimensions

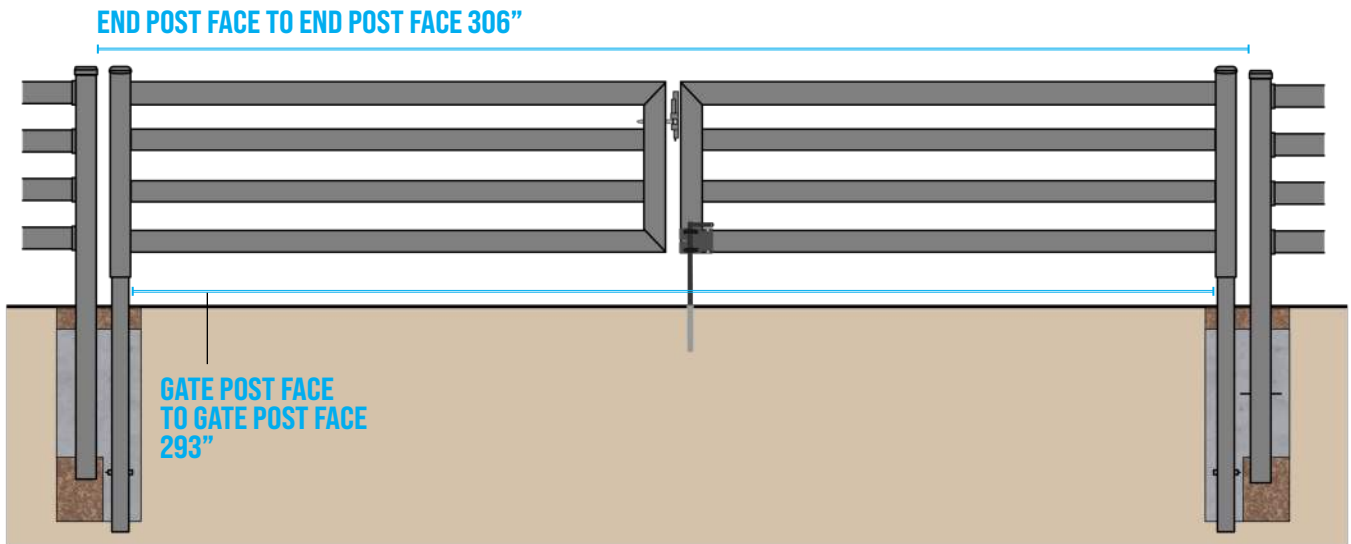


4 Foot + Section Gate Dimensions

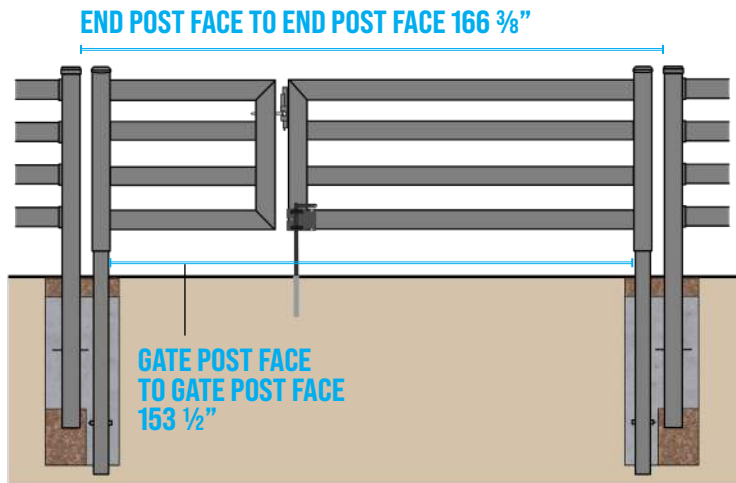

4 Foot + 12 Foot Gate Dimensions

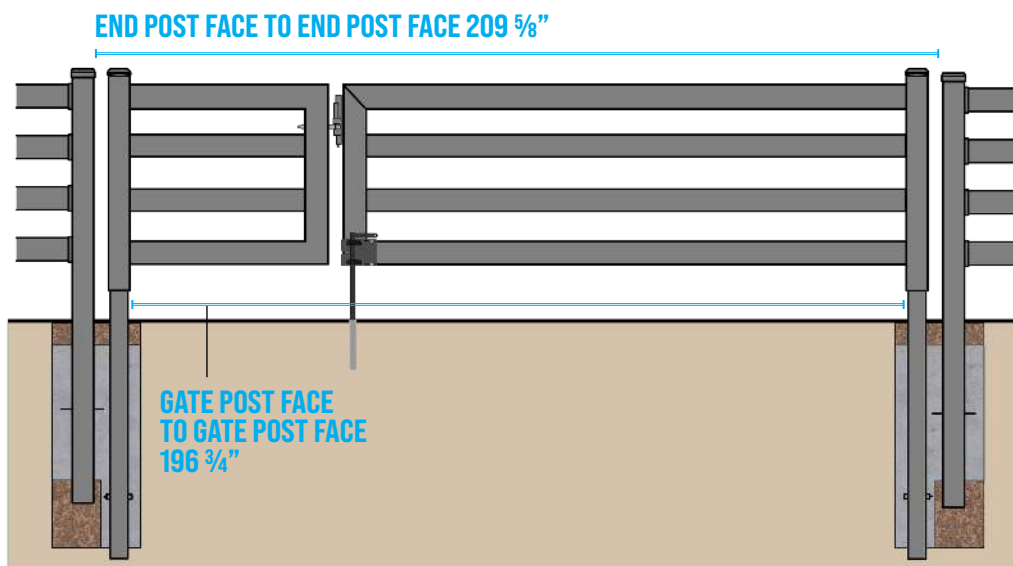

Section + 12 Foot Gate Dimensions

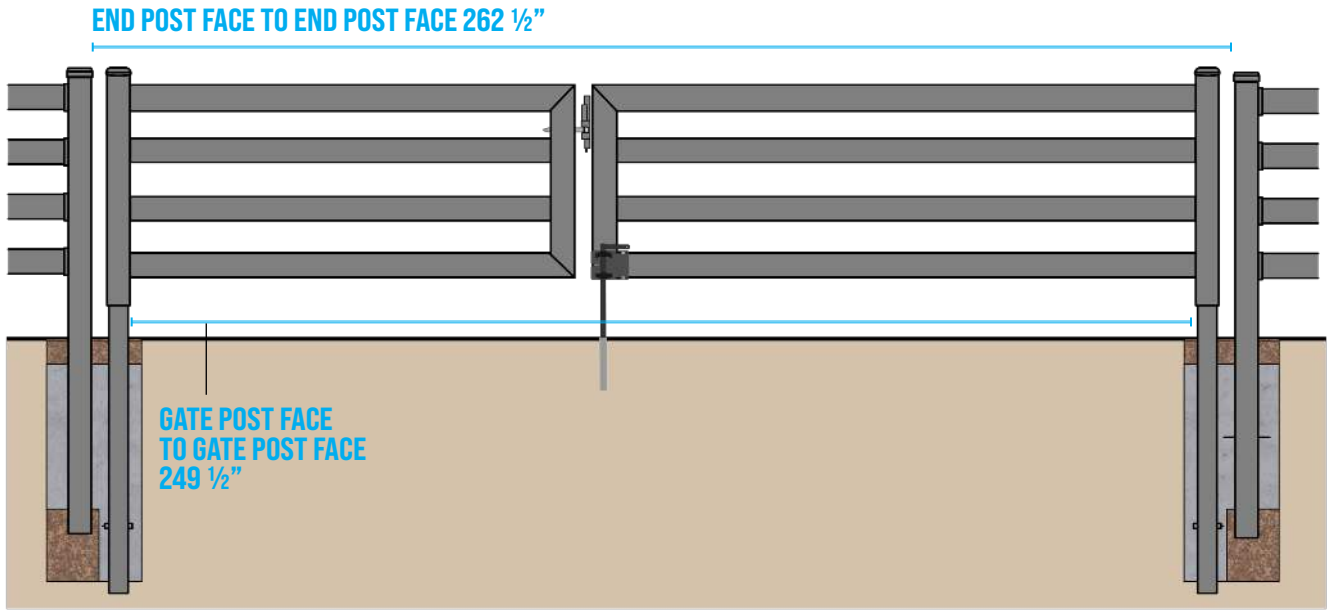

***Gate Post Face to Gate Post Face Dimensions are reference only and rounded to the nearest 1/4". End Post Face to End Post Face Dimensions are exact and must be within the nearest 1/8".