



# POST CENTERS

## BUCKLEY FENCE POST CENTERS

Post center to post center measurements are used to measure post hole placements in the field.


Use these measurements to mark with spray paint where to use the auger to dig post holes.

## POST & RAIL DIMENSIONS

Rail Size



Post Size

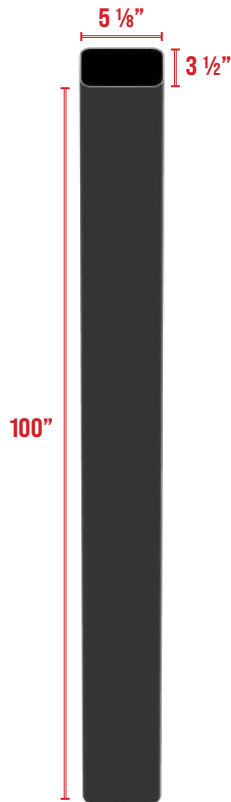

BUCKLEY FENCE POST CENTERS			
Section Number	Feet	Inches	Centers in Exact Total Inches
1	9	7.75	115.75
2	19	3.5	231.5
3	28	11.25	347.25
4	38	7	463
5	48	2.75	578.75
6	57	10.5	694.5
7	67	6.25	810.25
8	77	2	926
9	86	9.75	1041.75
10	96	5.5	1157.5
11	106	1.25	1273.25
12	115	9	1389
13	125	4.75	1504.75
14	135	0.5	1620.5
15	144	8.25	1736.25
16	154	4	1852
17	163	11.75	1967.75
18	173	7.5	2083.5
19	183	3.25	2199.25
20	192	11	2315
21	202	6.75	2430.75
22	212	2.5	2546.5
23	221	10.25	2662.25
24	231	6	2778
25	241	1.75	2893.75
26	250	9.5	3009.5
27	260	5.25	3125.25
28	270	1	3241
29	279	8.75	3356.75
30	289	4.5	3472.5
31	299	0.25	3588.25
32	308	8	3704
33	318	3.75	3819.75
34	327	11.5	3935.5
35	337	7.25	4051.25