

# ARENA FOOTINGS BRACKET

## BUCKLEY ARENA FOOTINGS BRACKET INSTALLATION INSTRUCTIONS

Arena Footing Brackets attach to Buckley Fence to keep expensive footing material contained in arenas. Eliminates the need for wooden boards, and offers more longevity and ease of installation.

### REQUIRED MATERIALS

1. Step drill or ½" drill bit
2. String
3. Marking pen

### 1 MARKING THE DRILL HOLES

1. Determine what level above the top of the footing's material will be at. String a line down the fence line at this level.
2. Measure 4" above the string and mark the post.
3. Measure 2" below the string and mark the post. These lines will be where you will drill into the post to mount the bracket.

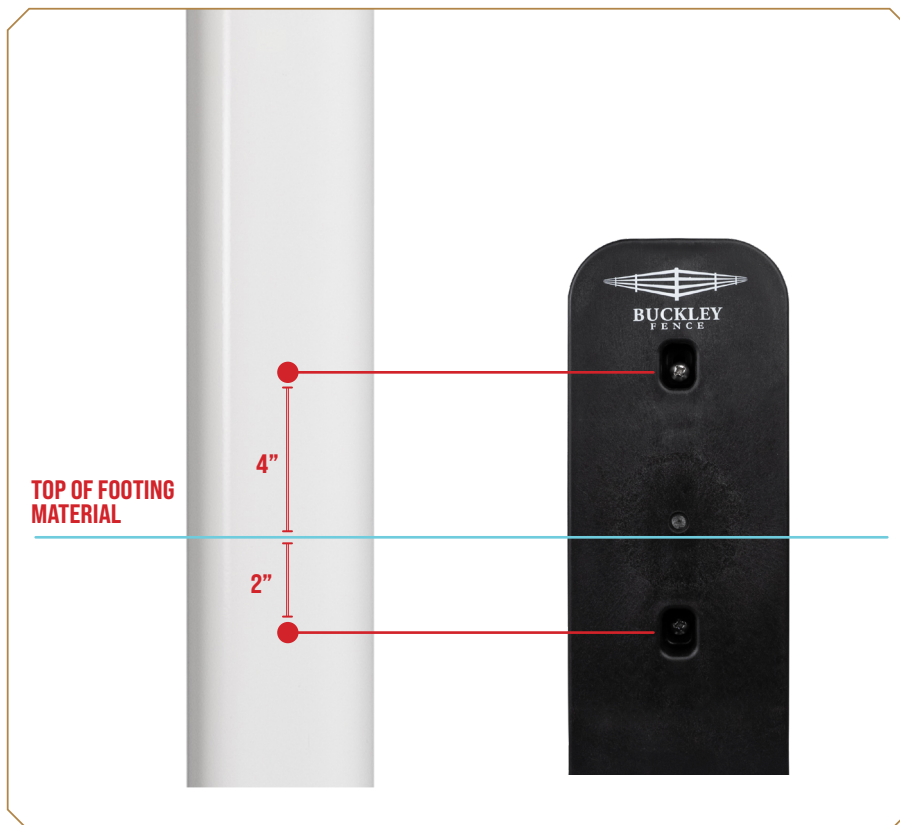


Figure 1

## 2 INSTALLING THE BRACKET

1. Using a step drill, drill one ½” hole on each marked line (4” above top level of footing material and 2” below top level of footing material). Each hole should be drilled approximately on the center of the post face (2 ⅞” from the edge of the post). (Figure 1) It is okay if the drill walks off the line you measured since the mounting holes are slotted to provide minor adjustments.
2. Once the holes are drilled, insert the rubber well nuts as shown in the picture below.
3. Place the mounting bracket over the well nuts and insert one of the screws into the top slotted hole. Screw into the well nut; do not tighten down fully.
4. Insert the second screw into the bottom slot on the mounting bracket and tighten fully. Then tighten the top screw fully.
5. Insert rails into brackets from the top, two rails per side. End posts will only use one side of the bracket.

