

HOT WIRE INSULATORS

HOT WIRE INSULATORS INSTALLATION INSTRUCTIONS

Our Hot Wire Insulators can be used to easily add any hot wire or tape to your Buckley Fence, vinyl, or pipe fence. Recommended when using Buckley Fence to contain large draft horses like Fresians and Belgians. For horses, we recommend hot wire across one to two rails. For cattle, apply to top and bottom rail.


REQUIRED MATERIALS

1. Step drill or 13 mm bit
2. Long #2 Phillips Bit



1 INSTALLING THE HOT WIRE INSULATORS


1. Drill holes using the step drill in the posts in accordance with the Hot Wire diagram below. Center the holes on the post face and at the height desired.
2. Mount the hot wire through the hot wire insulator.
3. Insert the Phillips bit into the drill. Screw the Hot Wire Insulator onto the fence. As you drill, the rubber well nut will seal the hole, ensuring no damage to the fence finish. Torque until snug, do not overtighten.
4. Repeat steps 2-3 for the remaining Hot Wire Insulators.

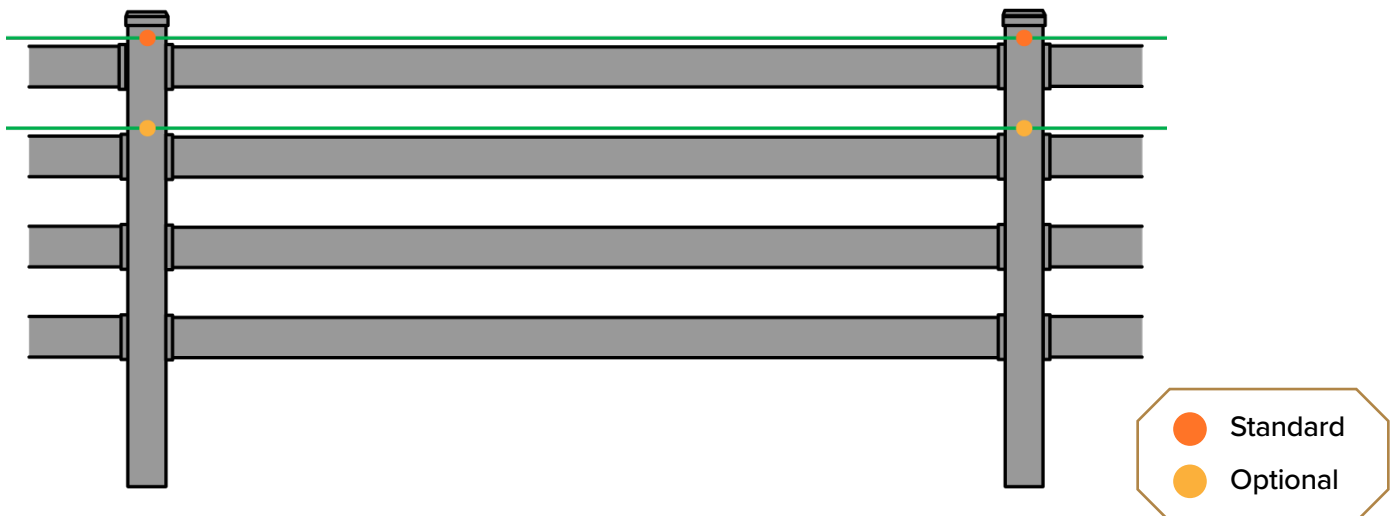

HOT WIRE ON GATES

1,22 m & Section Gate Hot Wire Placement

Hot wire insulators do not need to be installed directly to either 1,22 m gates or Section gates. Install the hot wire insulators as normal on the fence posts.

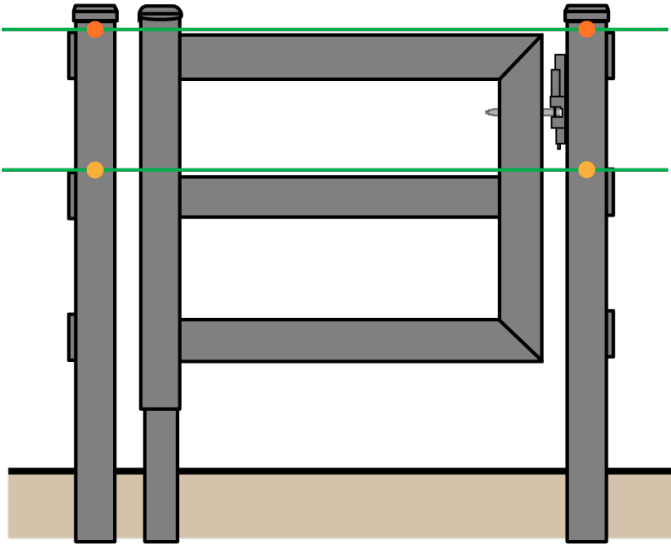

3,66 m Gate Hot Wire Placement

In the case of 3,66 m gates, one hot wire insulator should be installed in the center of the gate in order to prevent hot wire from sagging.

